


# 1. STOP

VERIFY ALL DIMENSIONS TO ENSURE THAT THIS PRINT IS 1 TO 1 SCALE.

# 2. MEASURE

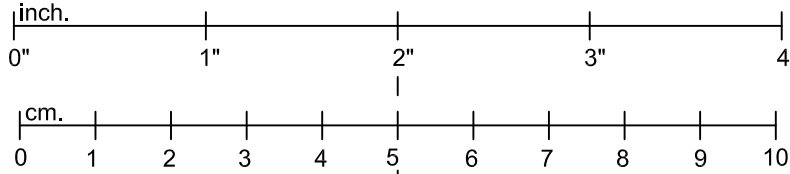


MEASURE WITH A RULER.

# 3. CUT

Document p/n:  
250-0681-002  
Page 1 of 1

THIS IS A PRECISION CUT-OUT TEMPLATE.  
DO NOT SCALE OR ADJUST!

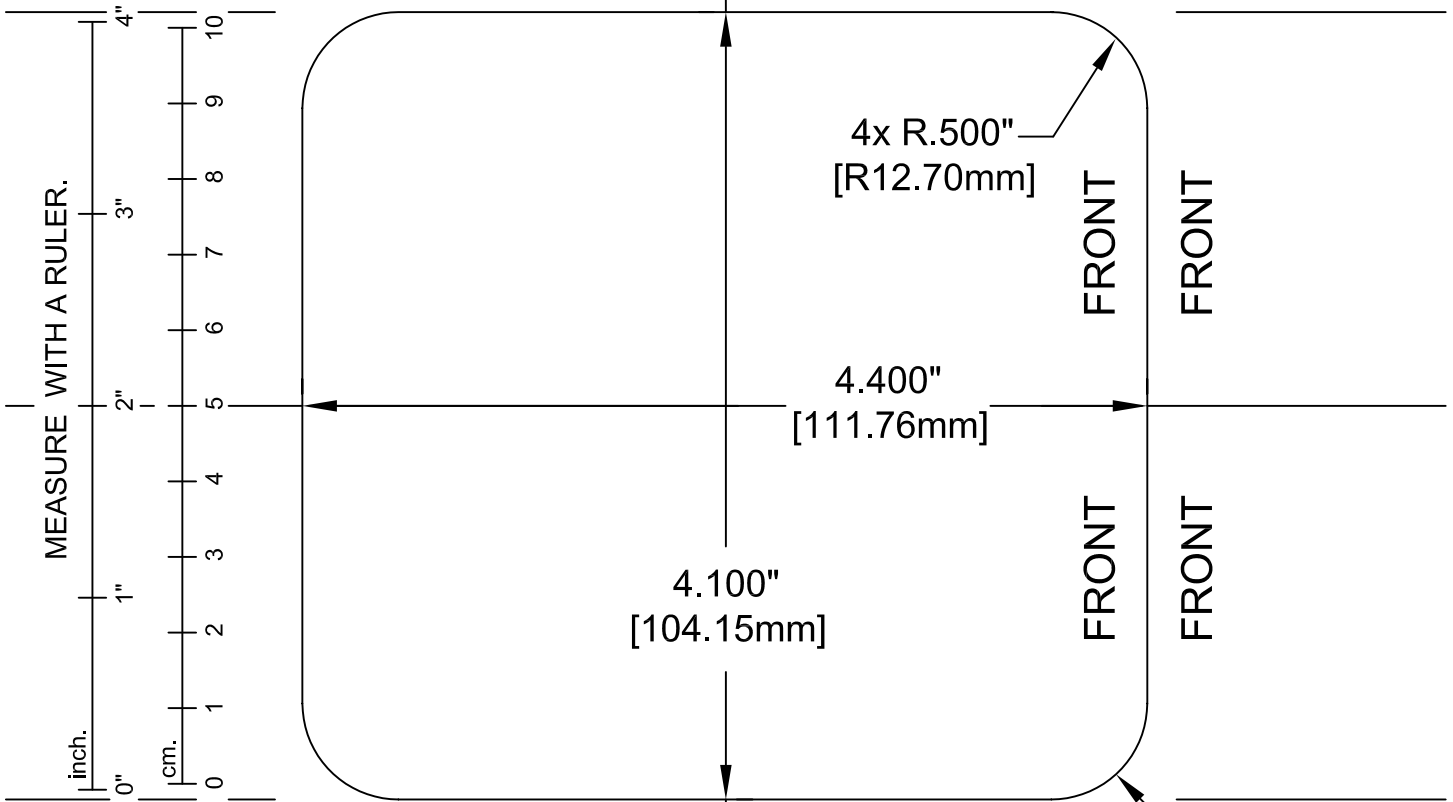

CUT TO THE  
OUTSIDE OF  
THE LINE.

ALTINEX, INC. IS NOT RESPONSIBLE  
FOR ANY DAMAGE TO A TABLE  
OR DESK.

**ALTINEX**<sup>®</sup>

ALTINEX, INC. MODEL NUMBERS:

TNP121	TNP121C
TNP121UN	TNP121UNC
TNP151	TNP151C
CNK221	CNK221C
CNK241	CNK241C

# 1. STOP

# 2. MEASURE

# 3. CUT